


CHILDREN ADJUSTABLE DESK




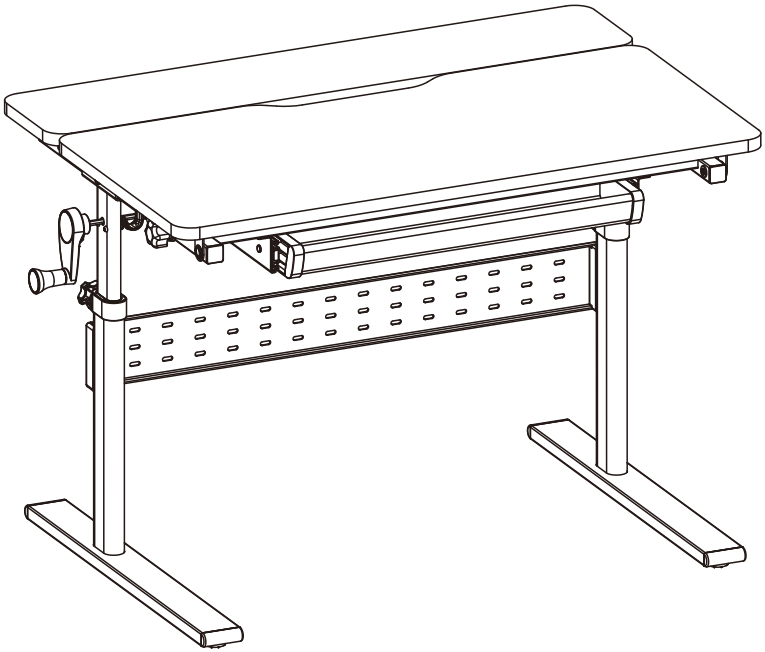


Model NO. Cab-PC-07950-G3



 CAUTION

1. Read the entire instruction manual before you start installation and assembly. Improper installation may result in damage or serious personal injury.
2. Adult assembly required. Product contains small parts that present choking hazards for children.
3. Never fully tighten the screws until all hardware has been assembled and in the proper place.
4. Never allow corrosives, moisture, or chemicals to make contact with the product as surface damage may occur. Should this happen, clean the surface immediately using a damp cloth.
5. The product is intended for indoor use only. Using the product outdoors or in an uncontrolled environment may result in product failure.

V1

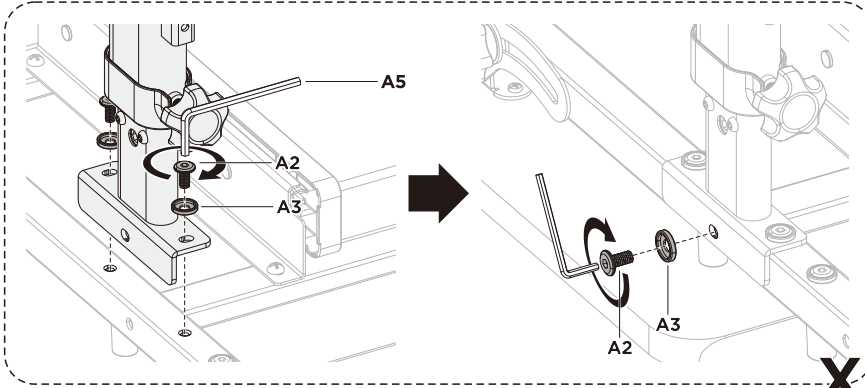
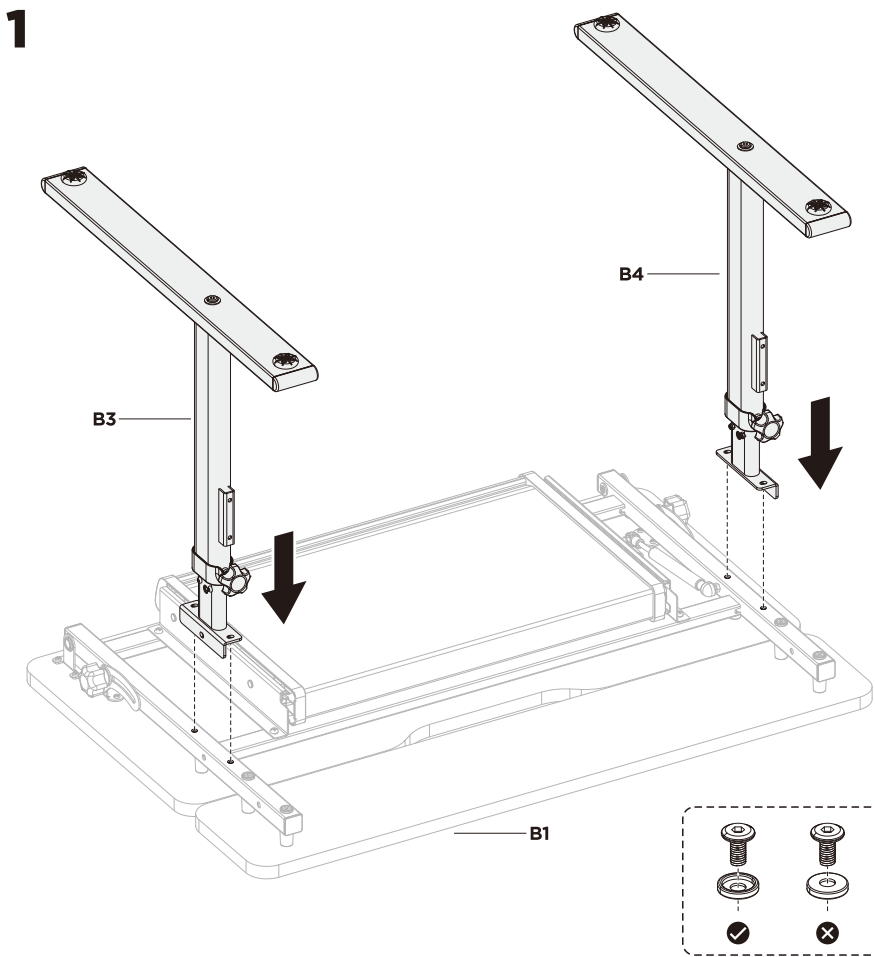
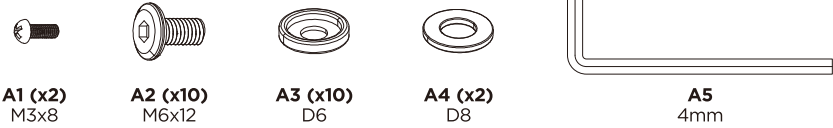
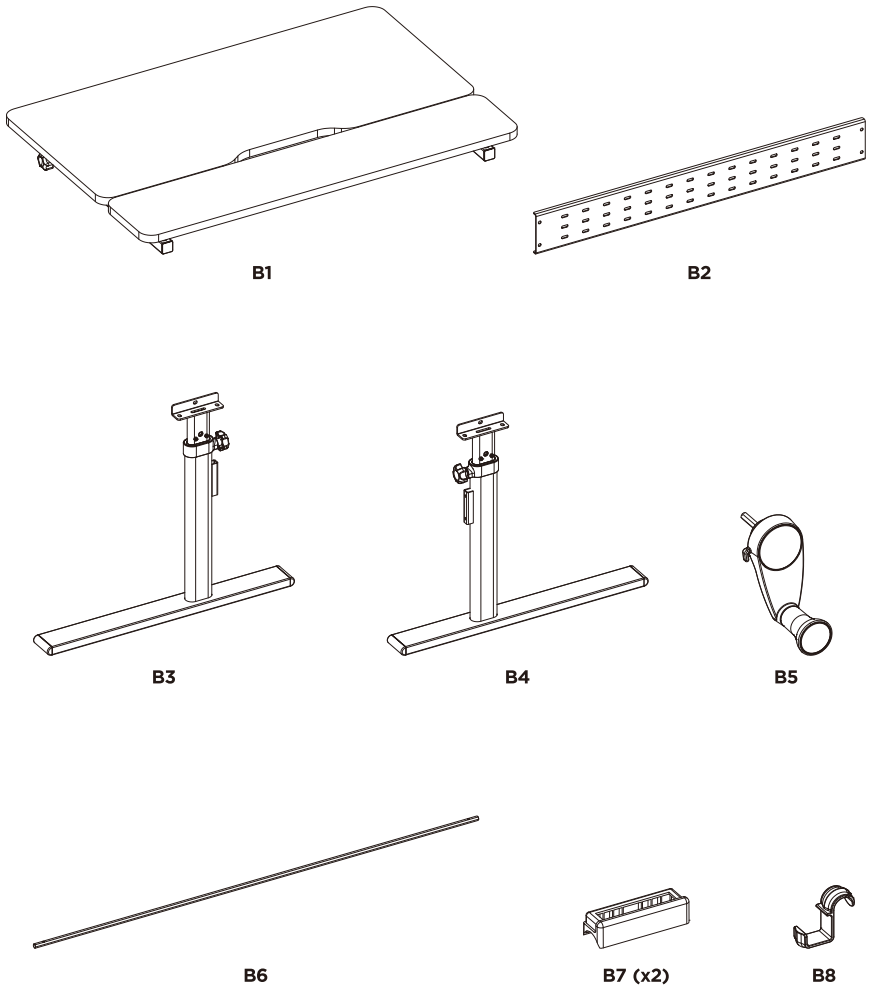


X2

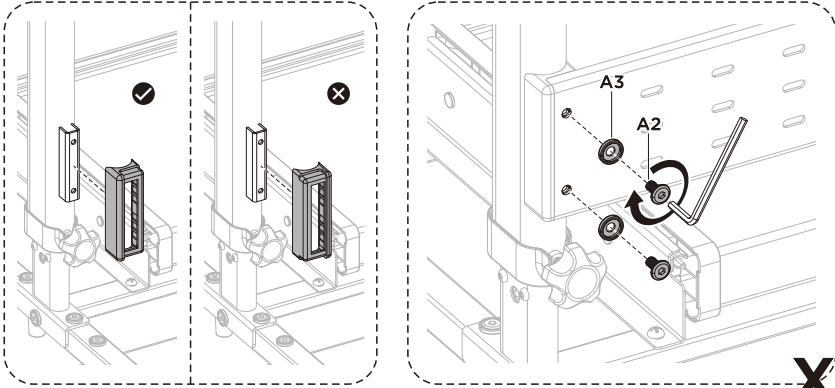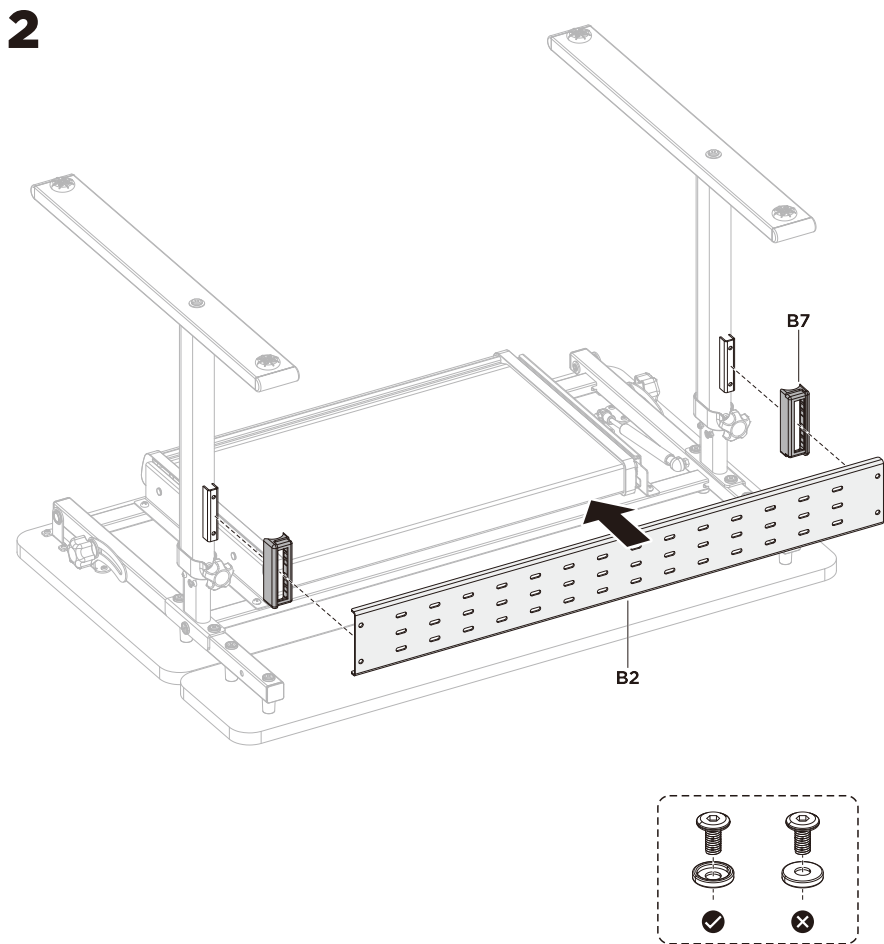


X2

3

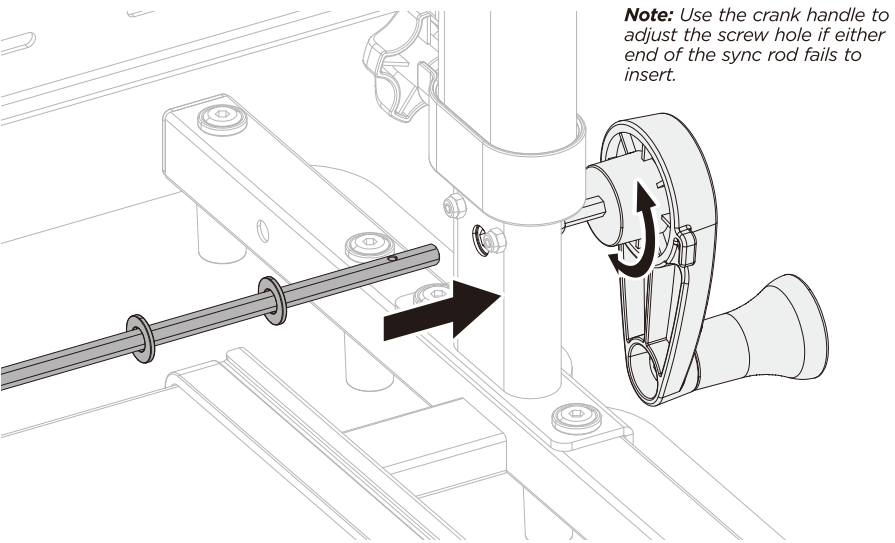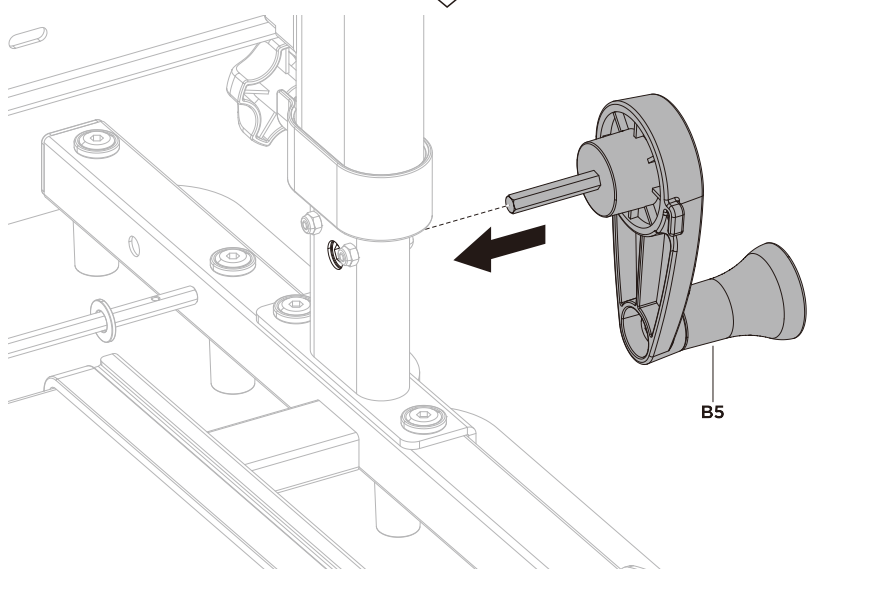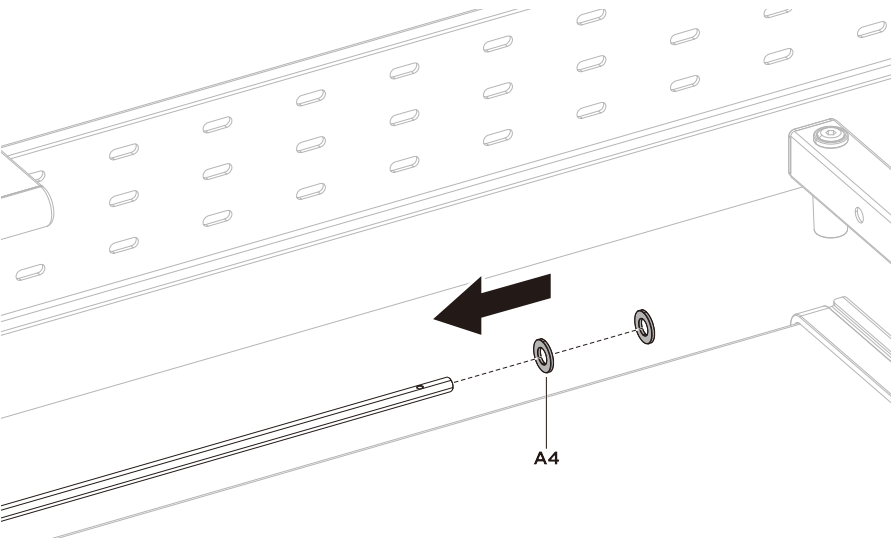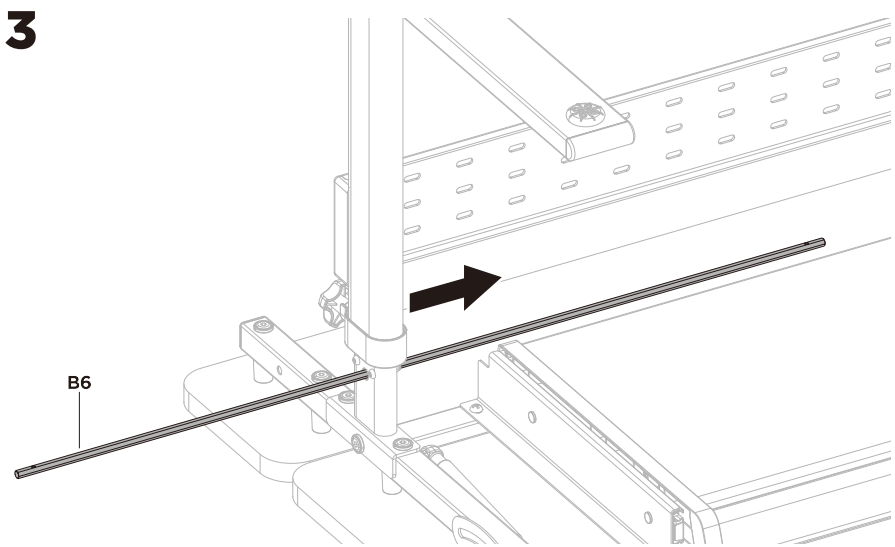






Note: Use the crank handle to adjust the screw hole if either end of the sync rod fails to insert.

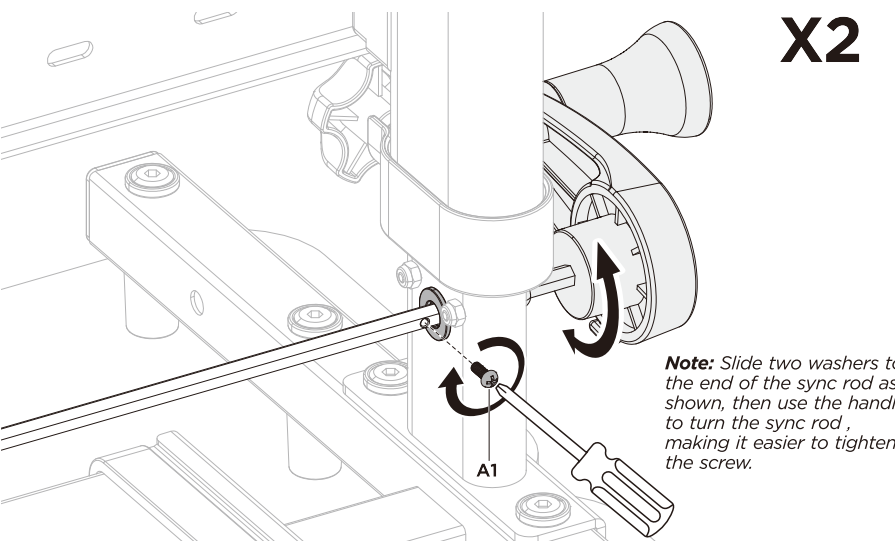

X2

Note: Slide two washers to the end of the sync rod as shown, then use the handle to turn the sync rod, making it easier to tighten the screw.

4

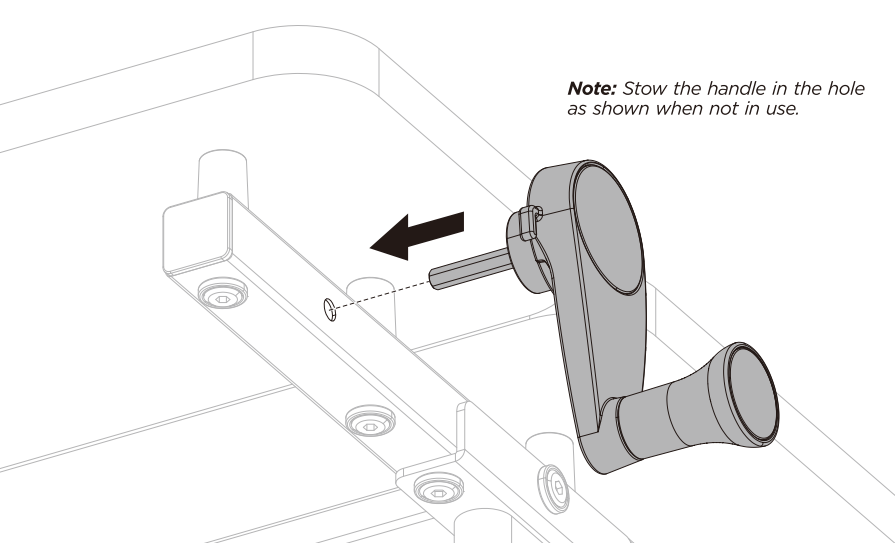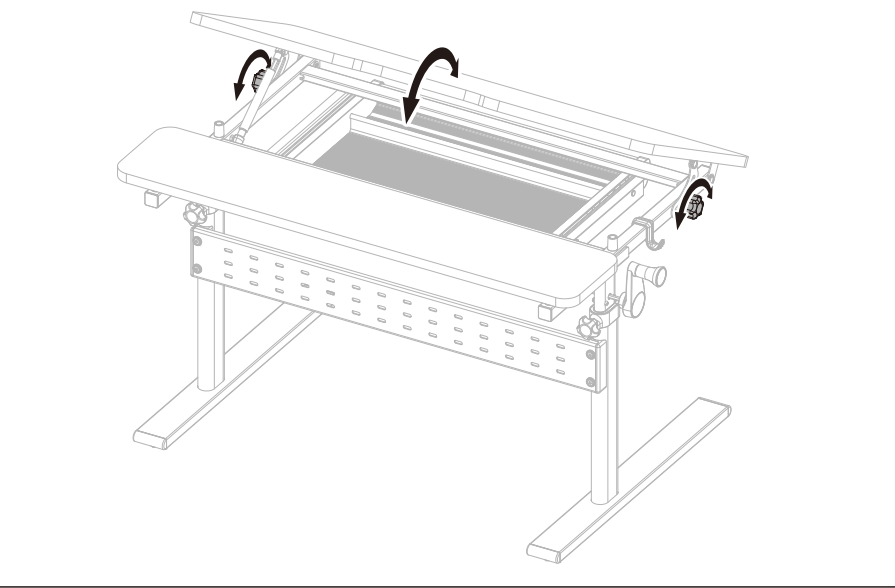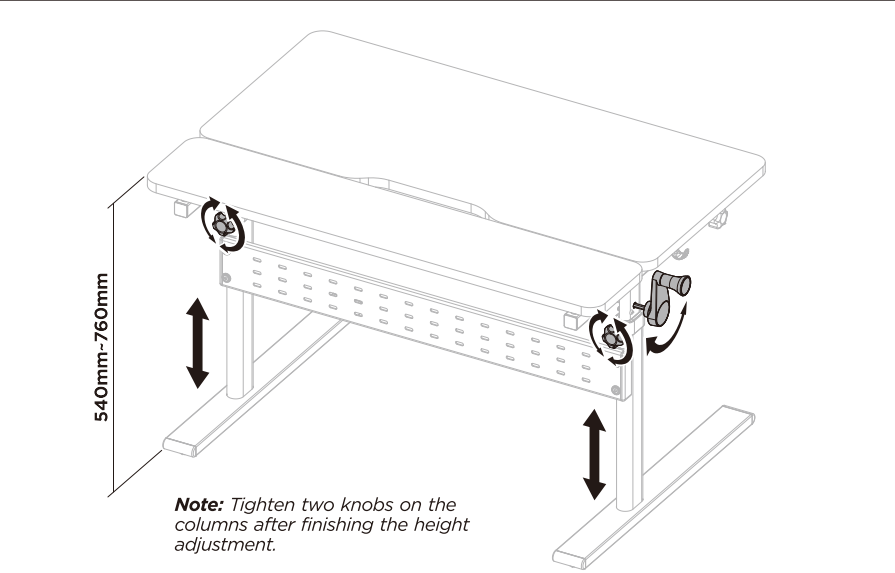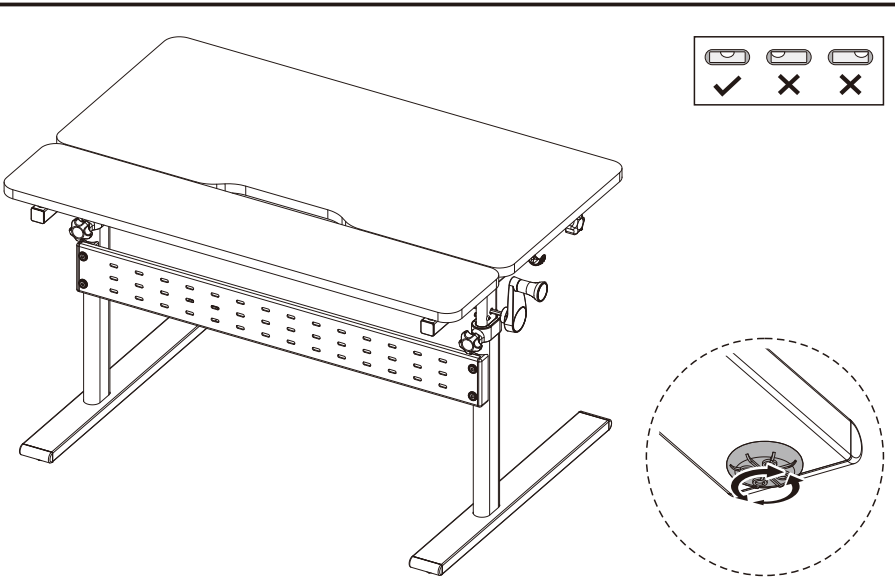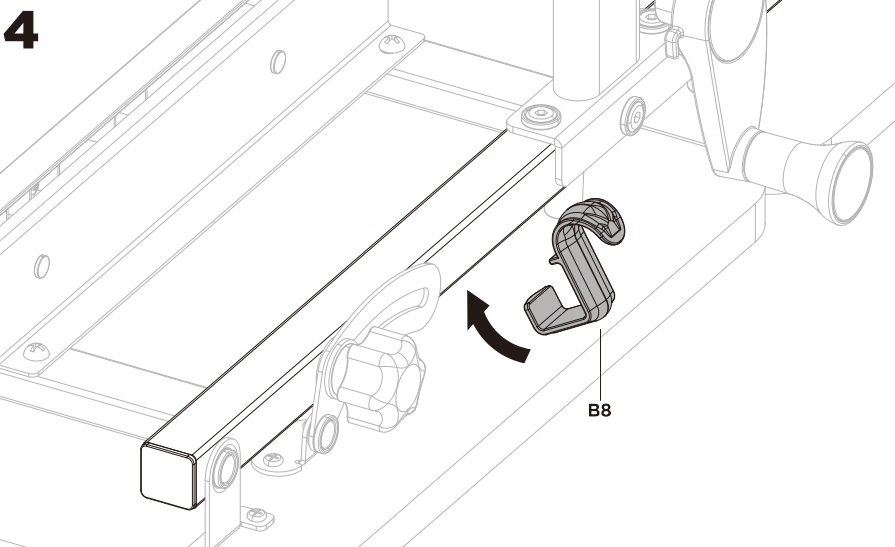

Note: Stow the handle in the hole as shown when not in use.