

! IMPORTANT:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully. Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. Should you ever have any questions or feel you require help please contact your place of purchase for assistance.

Instructions of Safety and Warnings

- Make sure that the mounting surface is strong enough to handle mounted product and equipment.
- **DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**
- Always be sure to have someone assist you or a mechanical device to lift and position heavy products safely.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction or alterations of the given power unit and control box aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless the product is intended for their use and all instructions and manuals are fully reviewed and understood by them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).

Other Cautions


- Don't clean the product with water while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Never operate the system with a damaged cord or plug.
- Never operate the system if it's in moist environment or its electrical components have contact with liquids.
- If the control box makes unusual noise or smells, switch off the mains voltage immediately.
- Disposal:** The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Standby mode condition of electrical and electronic household equipment.
Mode: Standby mode **Power consumption (Watts): ≤0.5W**
The period after which the product automatically enters standby mode is 1 minute.
Mode: Networked standby mode **Power consumption (Watts): ≤2W**
After 1 minute of stopped operation, this product enters network standby mode.

Instruction Manual

Heavy-Duty Smart Motorized Ceiling TV Mount

Support De Plafond Motorisé Intelligent Et Robuste Pour TéléViseur

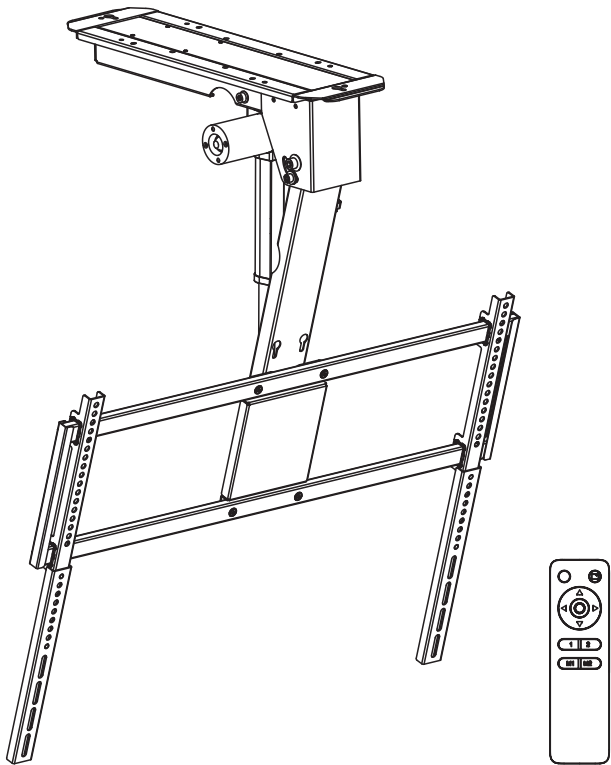

Cab-PLB-M0848

VESA Compatible

200x100	200x200	300x200
400x200	300x300	400x300
600x200	400x400	600x300
600x400	800x400	

86"
MAX
FLAT/CURVED

55kg
(121lbs)
RATED

V1

5a

Note: Align the VESA holes on the back of the TV screen with the mounting holes on the Brackets **C**. Ensure the mounting frame is in the center on the back of the TV screen.

5b

VESA Extensions for Lower VESA Holes
The VESA Extensions **D** can be used on TVs that have lower hole positions.

Note: Align the VESA holes on the back of the TV screen with the mounting holes on the Brackets **C** and the VESA Extensions **D** as shown.

6

7

8

