

Size: 630x200mm
Die line: _____
Fold line:




GUIDEBOOK

of Tuya App


GUIDE D'UTILISATION de
l'application Tuya




- The guidebook is for illustration purpose only and the latest App may vary.
- Download the Tuya Smart App from App Store or Google Play.
- Wi-Fi Standard: IEEE 802.11b/g/n
Operation frequency: 2,400-2,4835GHz
RF output power: 20dBm Max
- Ce guide est fourni à titre illustratif uniquement, L'apparence de l'application peut varier selon la version.
- Téléchargez l'application Tuya Smart depuis l'App Store ou Google Play.
- Norme Wi-Fi : IEEE 802.11b/g/n
Fréquence de fonctionnement : 2,400-2,4835 GHz
Puissance de sortie RF : 20 dBm max

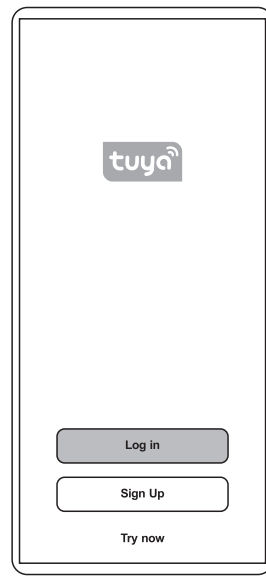


1. Sign in with phone number and a verification code, follow the instructions to enter.

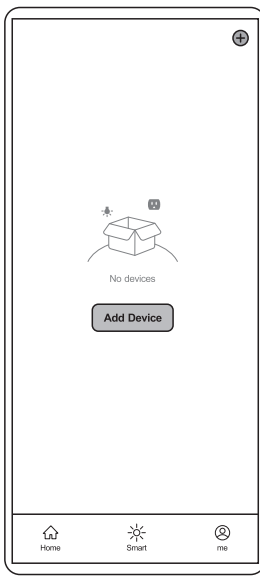


2. Cliquez sur « Ajouter un appareil » ou sur l'icône « + » dans le coin supérieur droit pour accéder à la page de sélection d'appareil.

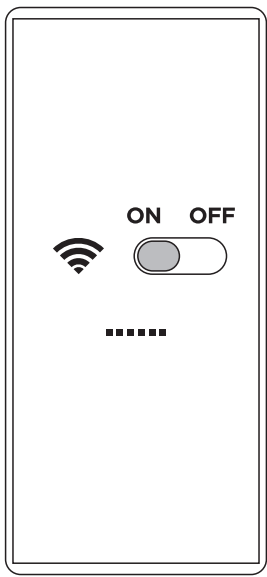


3. Turn on the 2.4G wireless as promoted by the APP, then connect your phone to the 2.4G Wi-Fi.

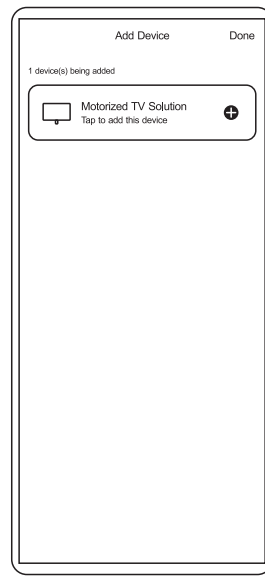


4. Click "Motorized TV Solution" in the "Auto Scan" page and go to "Next".

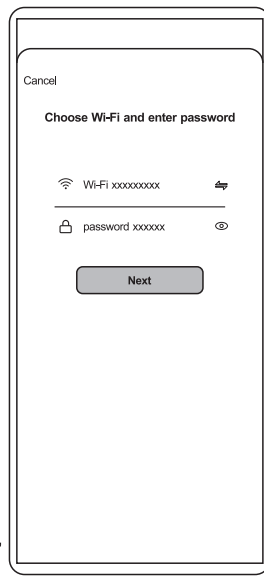


5. Sélectionnez le réseau Wi-Fi et saisissez le mot de passe correspondant, puis cliquez sur « Suivant ».

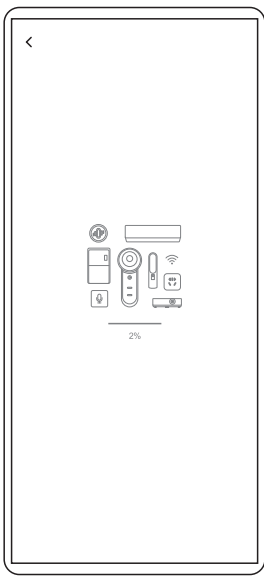


6. The device will be added after 10 to 60 seconds. The unit will emit a beep indicating success.

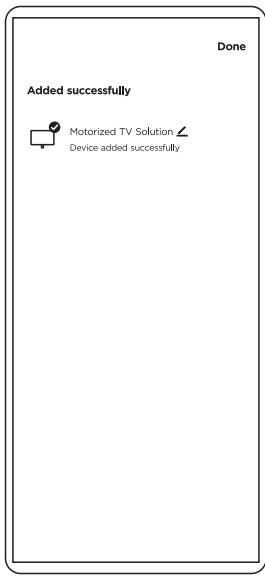


7. Once device is connected, click the "Done" to enter the "remote" dashboard. You can also edit your device name by clicking the pencil icon.

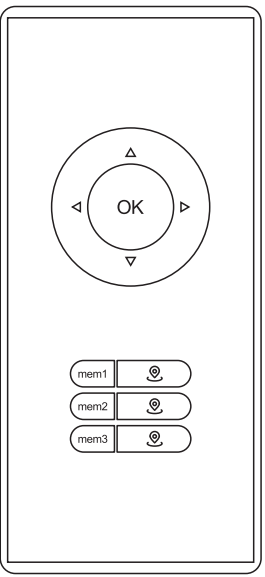

8. Refer to the Instruction Manual in operation.

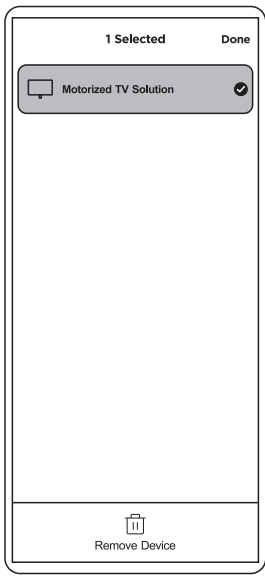


9. Long press the device to disconnect in the front page.

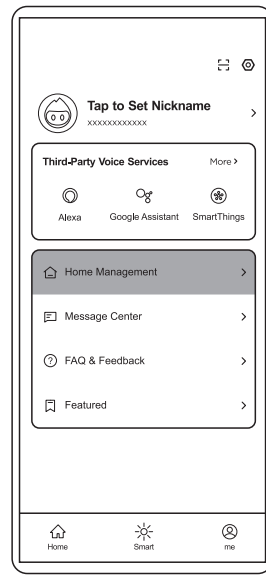


10. Click "me" at the bottom, then click "Home Management".



11. Cliquez sur « Créer un domicile ».

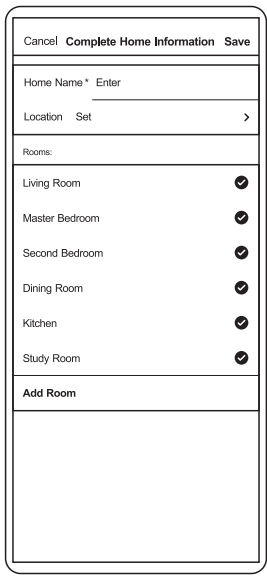

12. Complete new Home Information and save it.

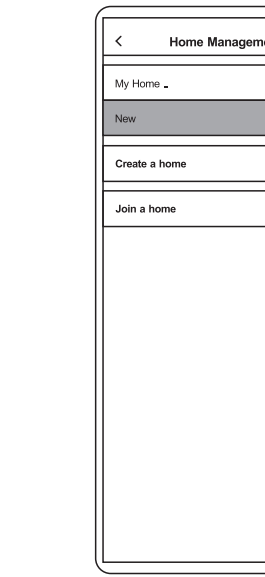

13. Choose the Home you just created in the list.




14. Cliquez sur « Ajouter un membre » pour inviter d'autres utilisateurs dans le domicile.


Note: One device is not able to be connected by multiple users except for Home Management Function. Former user needs to disconnect the device on the app (Press remote "M2" button 5 times, with approximately 1s intervals between each press to disconnect the device from the App.) before new user connects.

Control via Amazon Alexa


Controle via Amazon Alexa

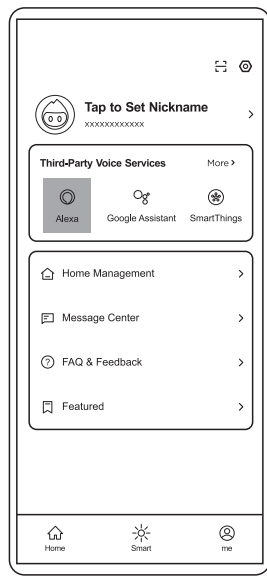


1. First download the Amazon Alexa app from the App Store or Google Play. Once installed, return to the Tuya app, click on "me" in the bottom right corner and click the "Alexa".

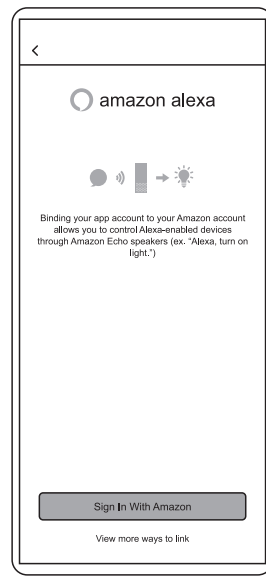

2. Cliquez sur « Se connecter avec Amazon ».

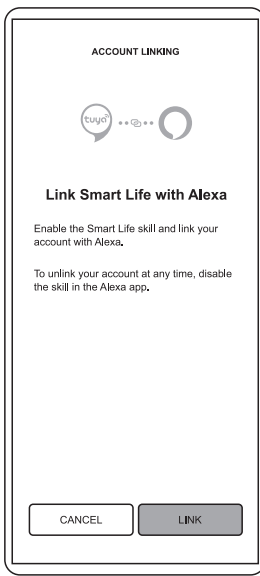

3. Click "LINK" to begin the linking process.

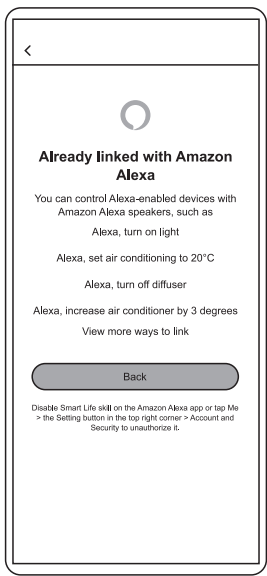

4. Once the linking is complete, you can start controlling the TV mount via Amazon Alexa.

Amazon Alexa Voice Control

(only supports English and German)


Commandes vocales Alexa :

voir tableau ci-dessous.


Commands	English Voice Commands	German Voice Commands
Upward Movement	Alexa, set <deviceName> to up.	Alexa, set <deviceName> to hoch.
Downward Movement	Alexa, set <deviceName> to down.	Alexa, set <deviceName> to runter.
Stop	Alexa, set <deviceName> to stop.	Alexa, set <deviceName> to stop.
Save Current Position as Memory 1	Alexa, set <deviceName> to Memory one.	Alexa, set <deviceName> to Memory eins.
Save Current Position as Memory 2	Alexa, set <deviceName> to Memory two.	Alexa, set <deviceName> to Memory zwei.
Save Current Position as Memory 3	Alexa, set <deviceName> to Memory three.	Alexa, set <deviceName> to Memory drei.
Move to Memory Position 1	Alexa, set <deviceName> to Position one.	Alexa, set <deviceName> to Position eins.
Move to Memory Position 2	Alexa, set <deviceName> to Position two.	Alexa, set <deviceName> to Position zwei.
Move to Memory Position 3	Alexa, set <deviceName> to Position three.	Alexa, set <deviceName> to Position drei.
Move to Initial Position	Alexa, set <deviceName> to Home.	Alexa, set <deviceName> to Home.

Control via Google Home


Controle via Google Home

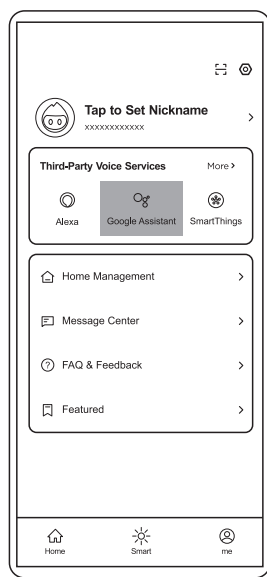


1. First download the Google Home app from the App Store or Google Play. Once installed, return to the Tuya app, click on "me" in the bottom right corner and click the "Google Assistant".

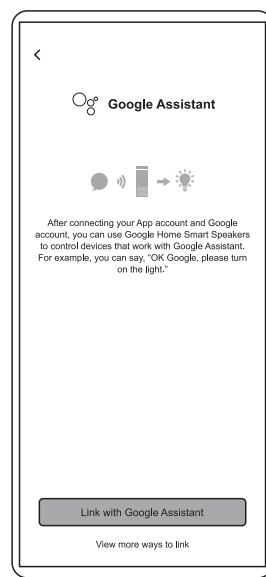

2. Cliquez sur « Associer avec Google Assistant » pour lancer l'application Google Home.

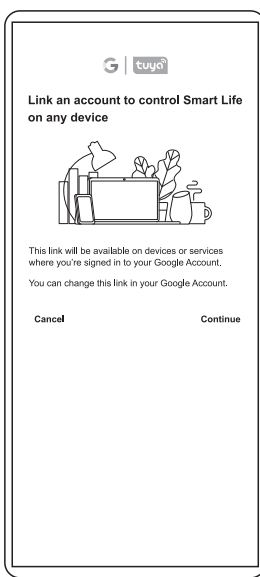

3. Click "Continue" to return to the Tuya App.

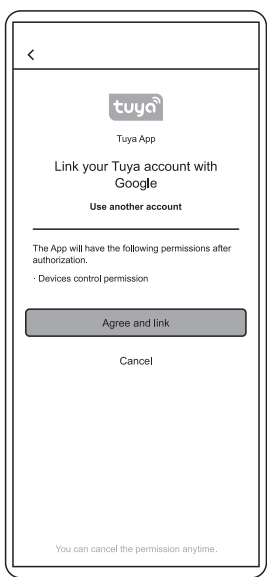

4. Click "Agree and link" to return to the Google Home app. The linking is complete, you can start controlling the TV mount via Google Home.

Google Home Voice Control

(only supports English and German)

Commandes vocales Google Assistant :

voir tableau ci-dessous.

Commands	English Voice Commands	German Voice Commands
Upward Movement	OK Google, set <deviceName> to up.	OK Google, set <deviceName> to hoch.
Downward Movement	OK Google, set <deviceName> to down.	OK Google, set <deviceName> to runter.
Stop	OK Google, set <deviceName> to stop.	OK Google, set <deviceName> to stop.
Save Current Position as Memory 1	OK Google, set <deviceName> to Memory one.	OK Google, set <deviceName> to Memory eins.
Save Current Position as Memory 2	OK Google, set <deviceName> to Memory two.	OK Google, set <deviceName> to Memory zwei.
Save Current Position as Memory 3	OK Google, set <deviceName> to Memory three.	OK Google, set <deviceName> to Memory drei.
Move to Memory Position 1	OK Google, set <deviceName> to Position one.	OK Google, set <deviceName> to Position eins.
Move to Memory Position 2	OK Google, set <deviceName> to Position two.	OK Google, set <deviceName> to Position zwei.
Move to Memory Position 3	OK Google, set <deviceName> to Position three.	OK Google, set <deviceName> to Position drei.
Move to Initial Position	OK Google, set <deviceName> to Home.	OK Google, set <deviceName> to Home.