


Cab-PC-ET23Q

Installation guide

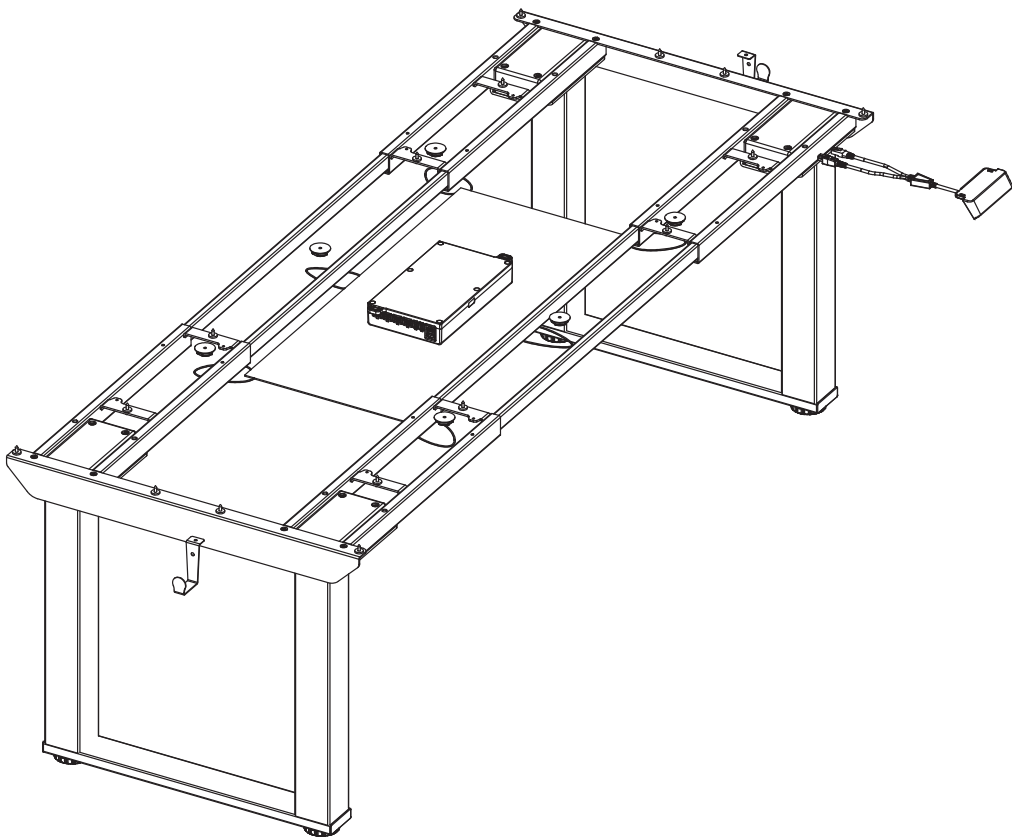

< The pictures below are for reference only, please refer to the actual product. >
Please read this product manual carefully before use, and keep it properly.


Technical Data

Max. Load Capacity	300KG
Max. Speed	38mm/s
Lowest Position	605mm
Highest Position	1255mm
Width Range	1100-1900mm
Applicable Desktop Size	Length: 1800mm-2400mm
	Width: 800mm-900mm


Product List

Accessory List


Note: The line drawings below are for reference only and may differ slightly from the physical product in some cases. Please refer to the actual product for accuracy. If any tools are missing or there are problems with installation, please contact customer service.

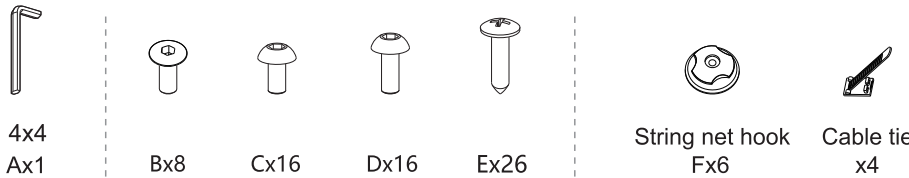

Preparation before installation

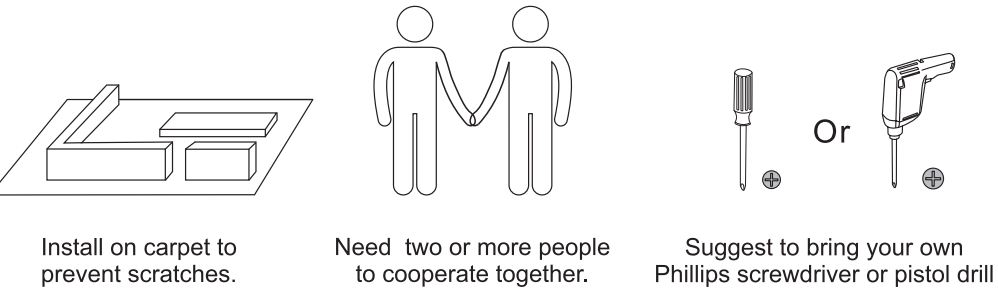


Part List

 No.	Part
①	Supporting beam x2 
②	Side bracket x2 
③	Lifting column x4 
④	Pedestal x 2 
⑤	Handset x 1 

No.	Part
⑥	Control box x1 
⑦	Cables x 1 
⑧	Cable management net x1 
⑨	Magic Velcro Straps x1 
⑩	Hooks x2 


Installation Instruction

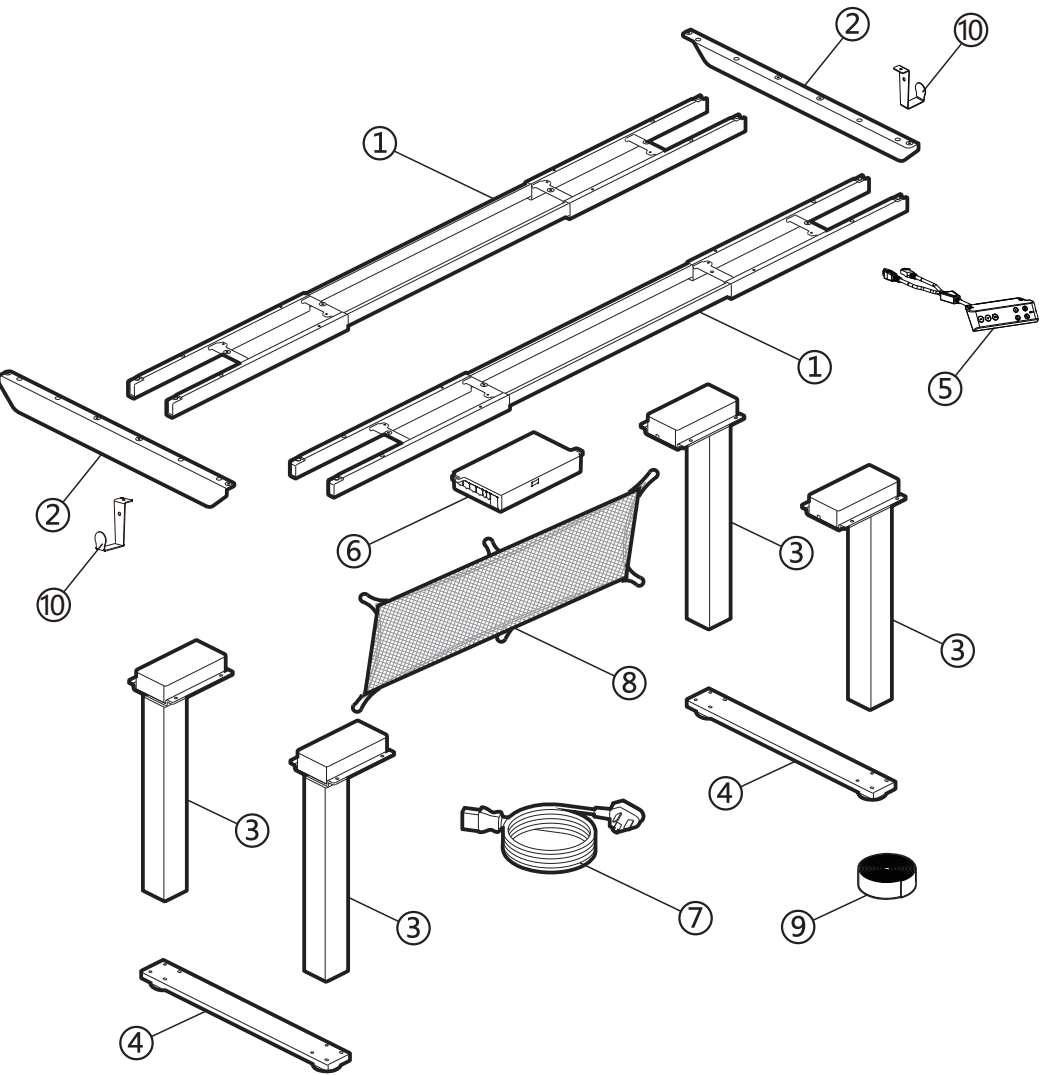

Installation Steps


STEP1

Install the bracket

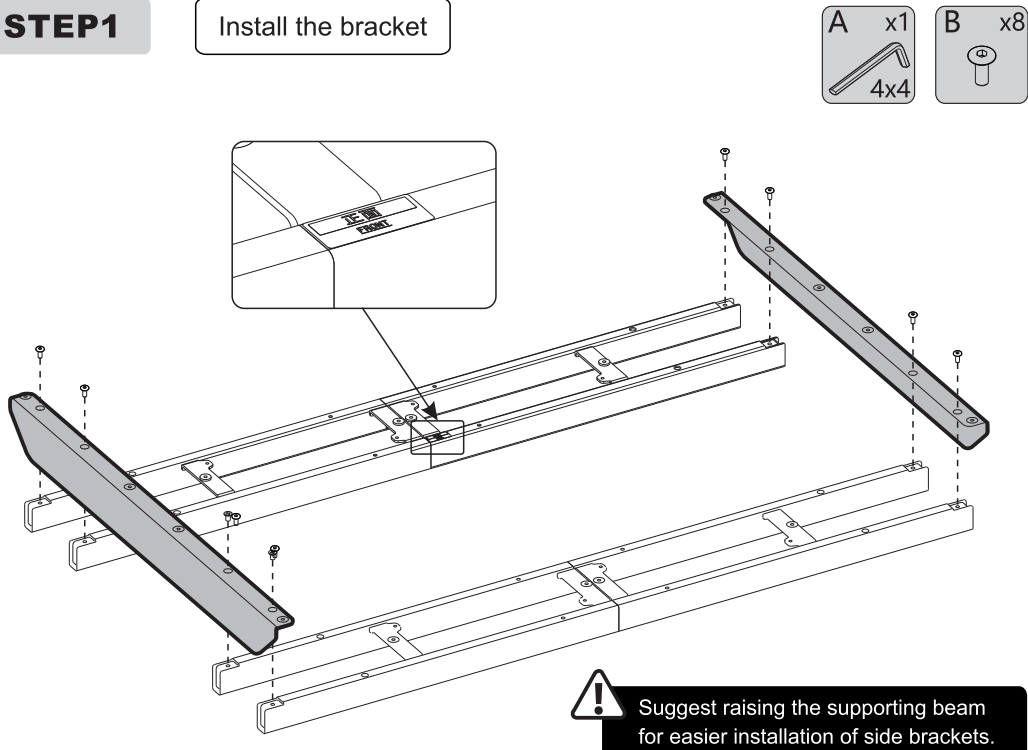

STEP2

Adjust the supporting beam

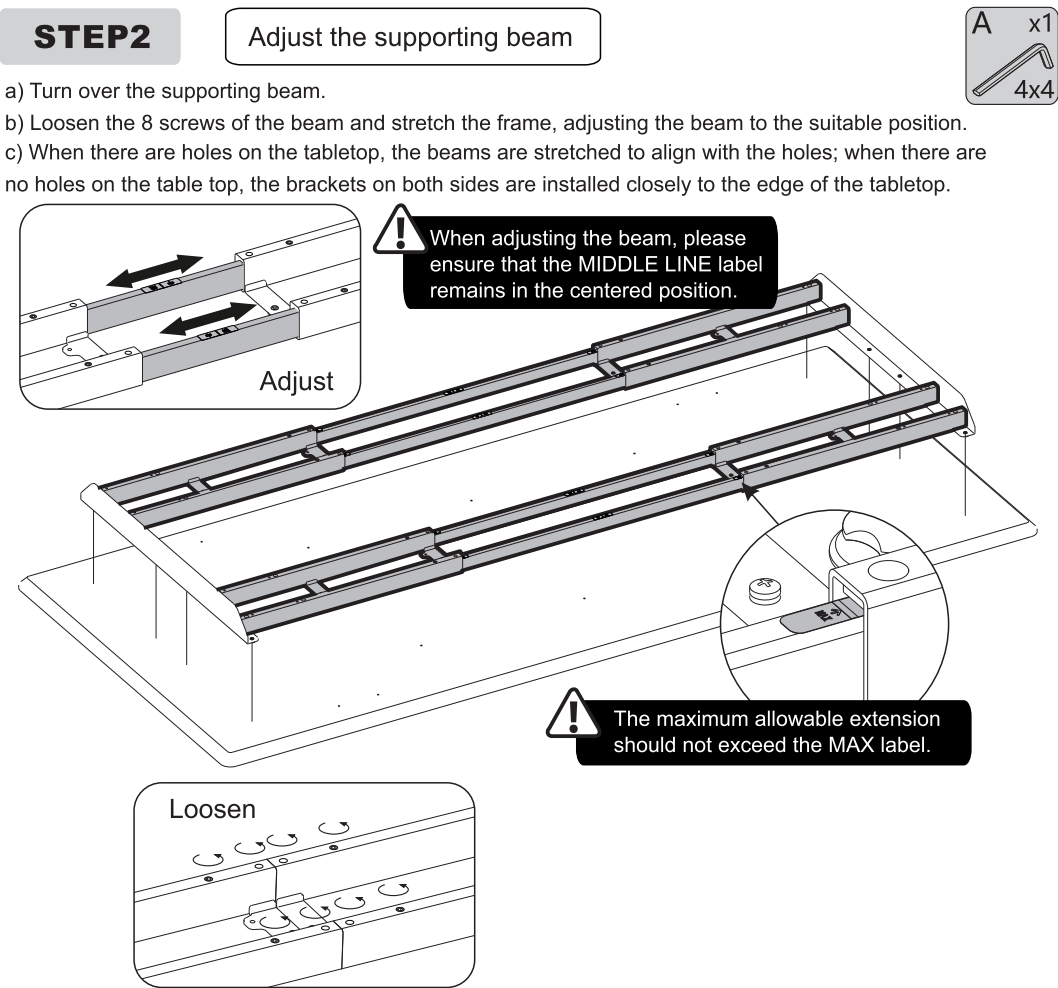


STEP3 Install the tabletop and lock the crossbeam

A x1
4x4

E x16


Self-prepared

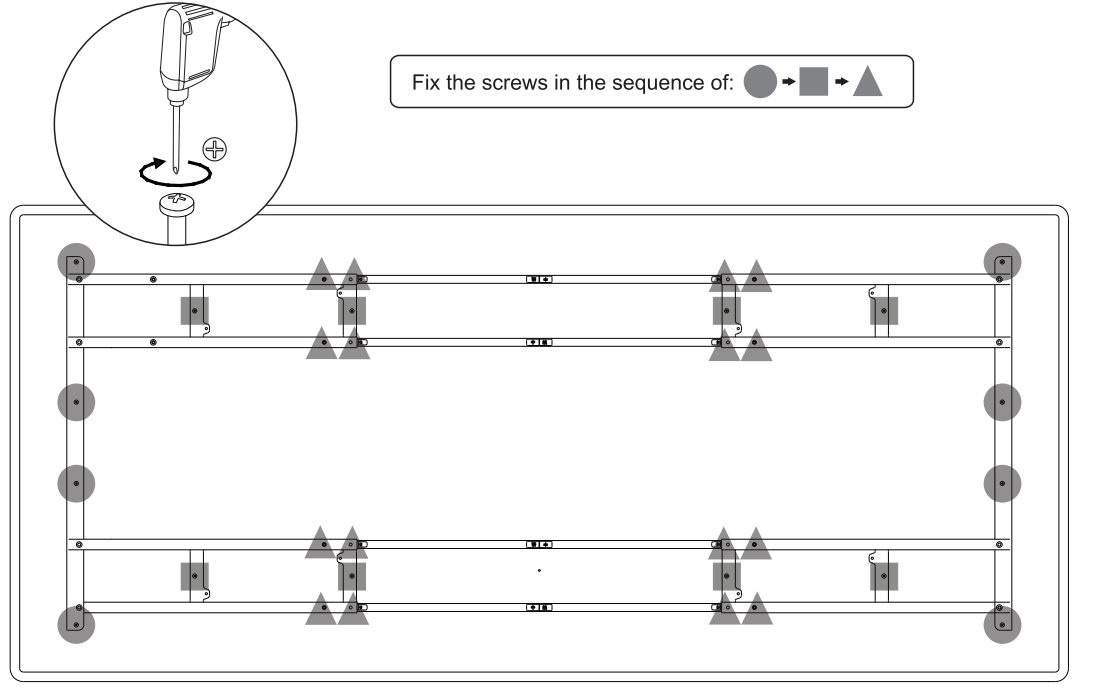

STEP4 Install the lifting columns

A x1
4x4


C x16

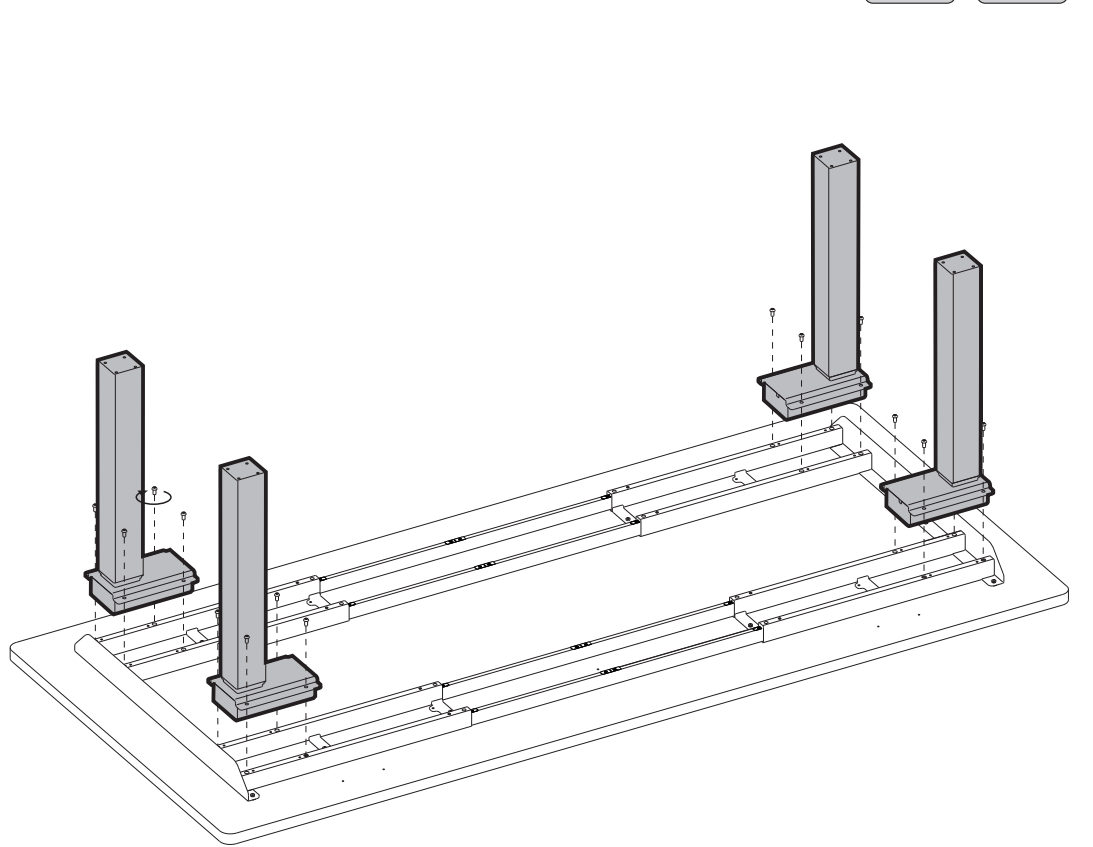

STEP5 Attach the pedestals

A x1
4x4

D x16

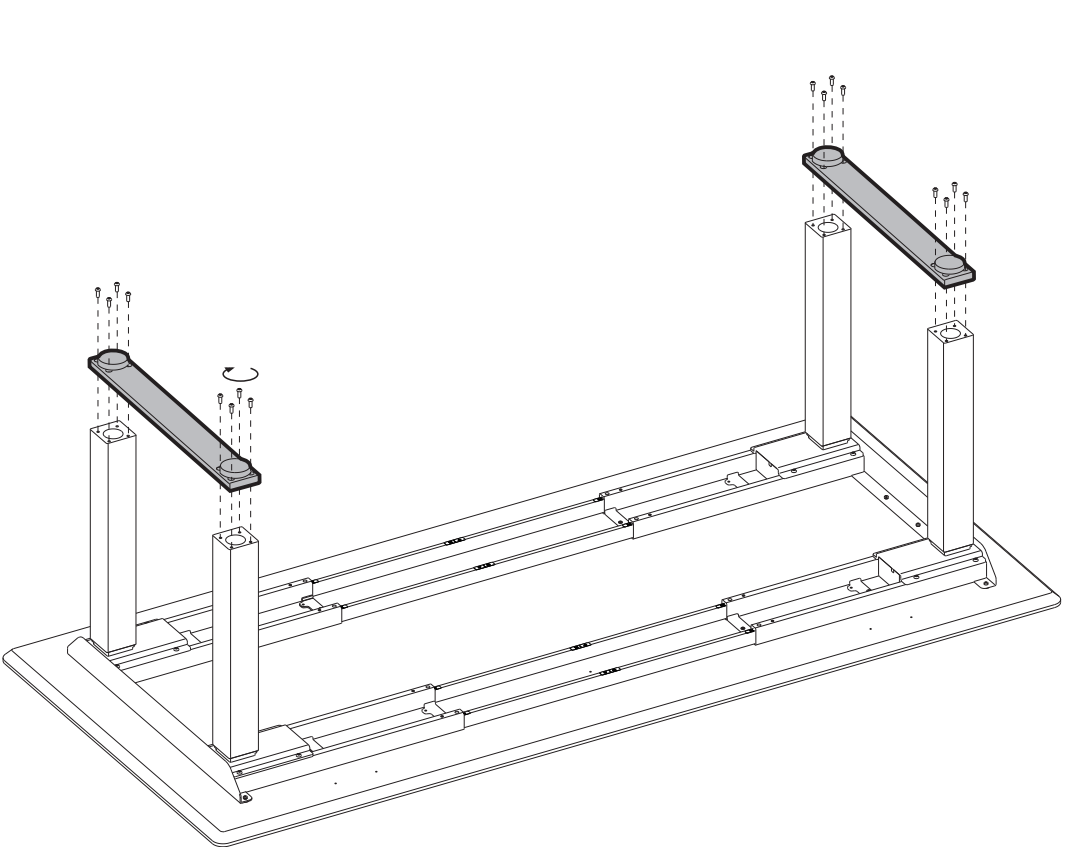

STEP6 Install the handset and hooks

Choose either of the two installation methods.


Left-handed install here

Right-handed install here

x2

E x2


Self-prepared

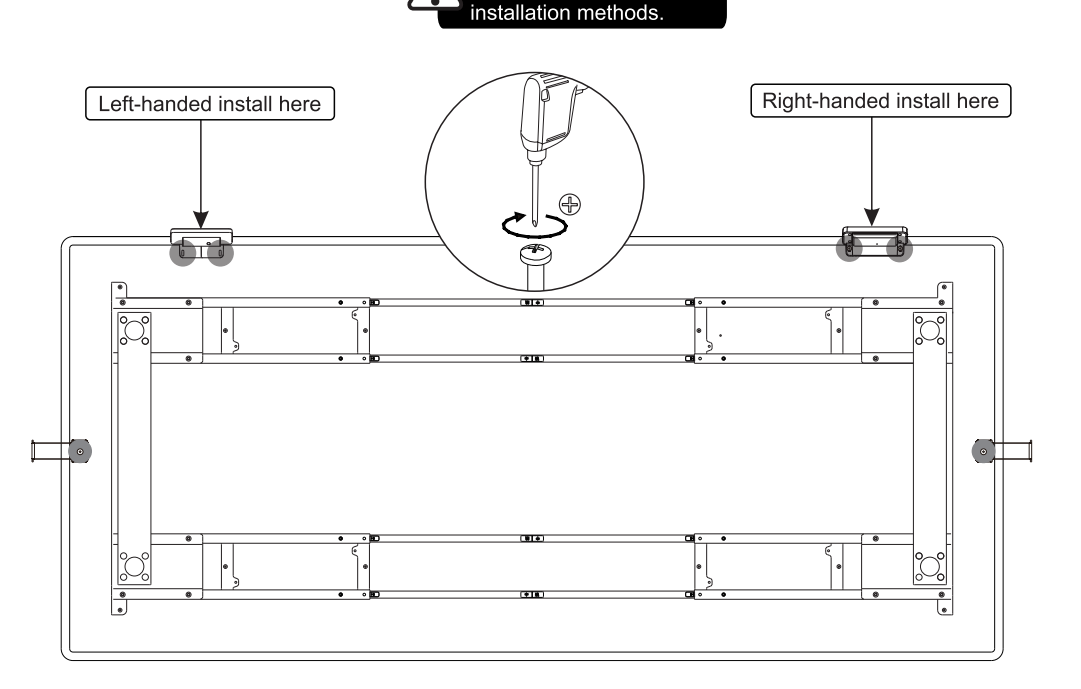

STEP7 Install the control box


E x2

Self-prepared

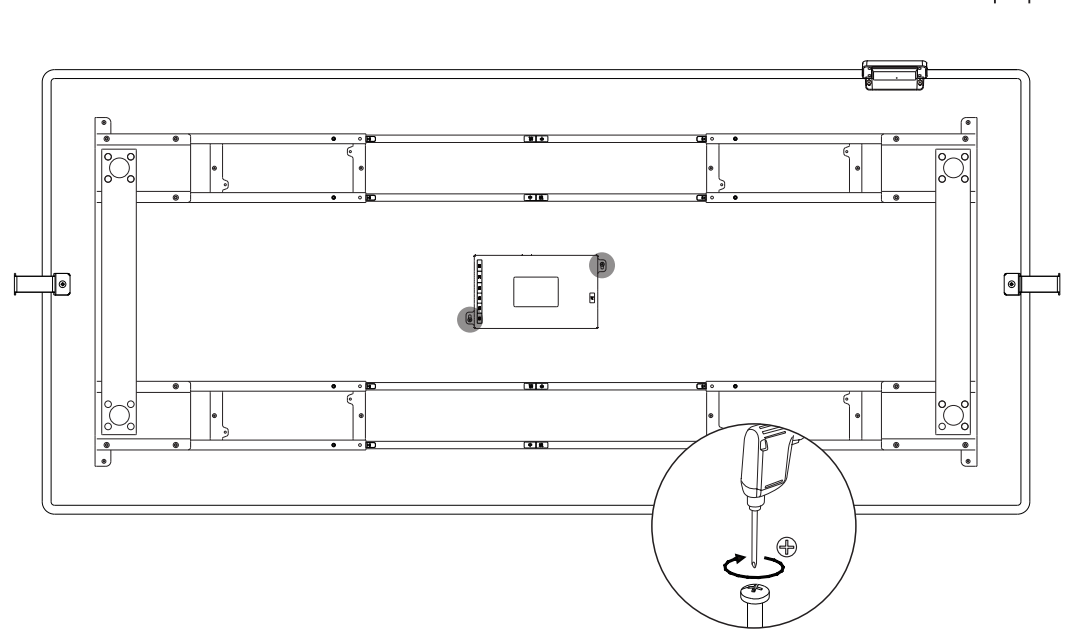

STEP8 Connect the wires


Connect wires of the same color to the corresponding interfaces.

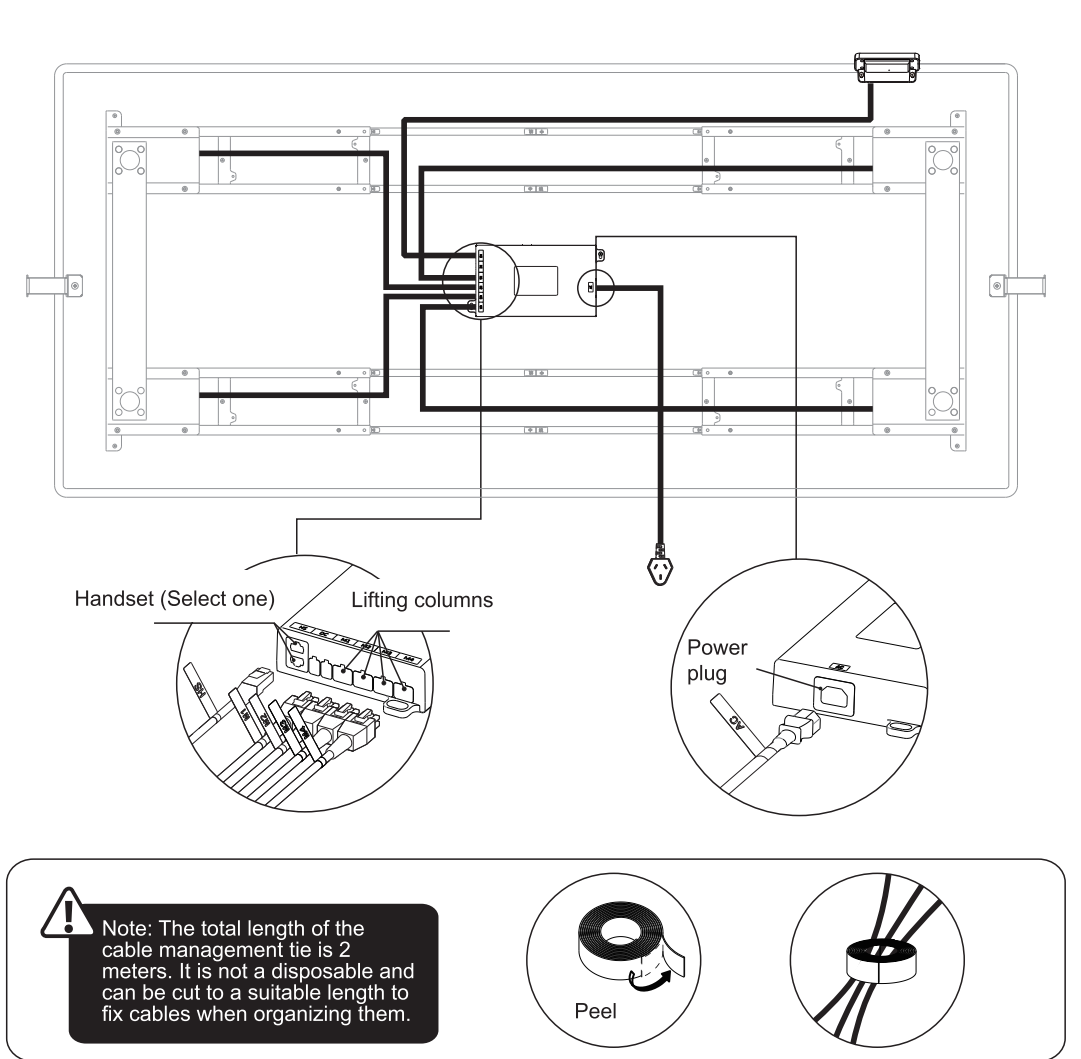


STEP9 Install the string net hook

E x6


Self-prepared

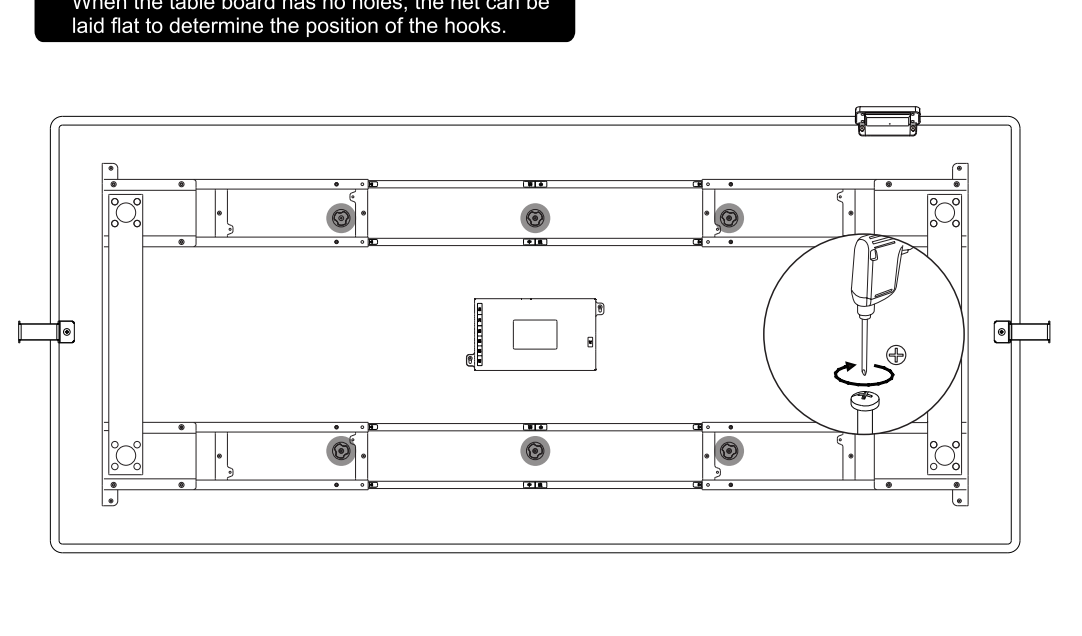

STEP10 Attach cable management net

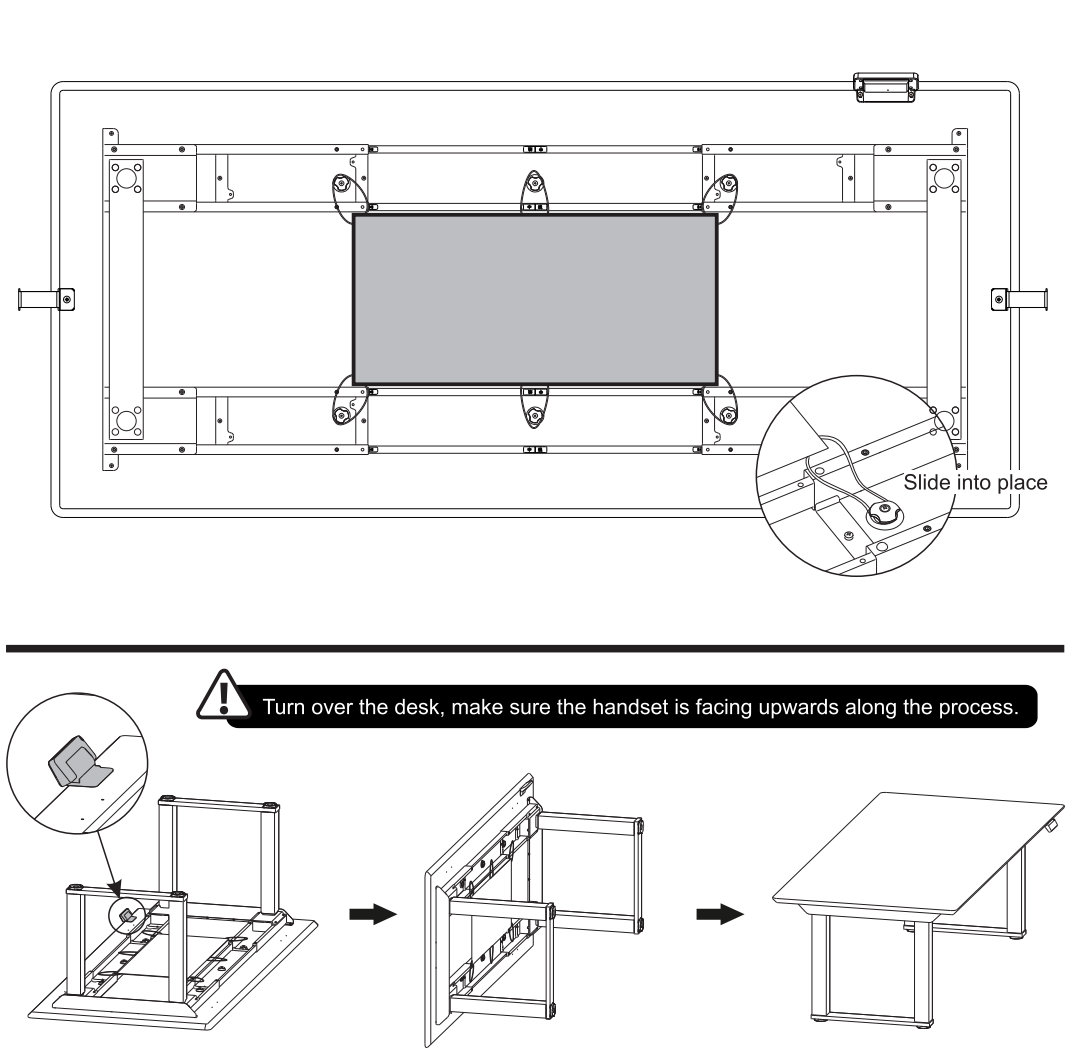

Handset control method and setting

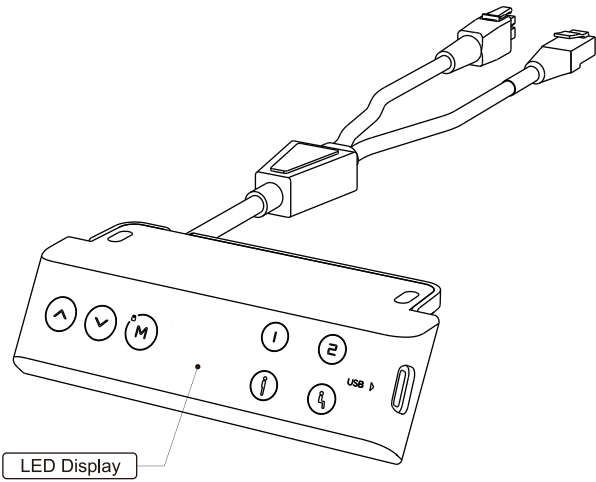


Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

Button introduction: There are 7 buttons that "▲", "▼", "M", "1", "2", " ", "↑", "↓"


- (1) "▲" : Up button, used to adjust the height of the desk to move upward.
- (2) "▼" : Down button, used to adjust the height of the desk to move downward.
- (3) "1" : Position 1, the user's saved first height position.
- (4) "2" : Position 2, the user's saved second height position.
- (5) "↑" : Position stand, The screen displays number 3, the third saved height.
- (6) "↓" : Position sit, The screen displays number 4, the fourth saved height.
- (7) "M" : Save button, used to save the height position, child lock.

Child lock function:

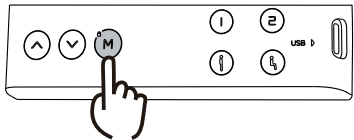


- a. Press "M" 5 seconds until display "LOC" and blue indicator light (in the middle of M and "▼") turn on.
- b. Button can not work under "LOC" status.
- c. Under "LOC" status, press "M" for 5 seconds to unlock.

Height Adjustment Function

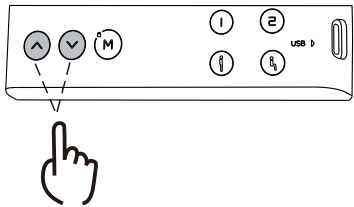


- a. By pressing the "▲" or "▼" keys, you can adjust the height of the desk up or down, and the current height will be displayed on the screen.


Height Memory Function

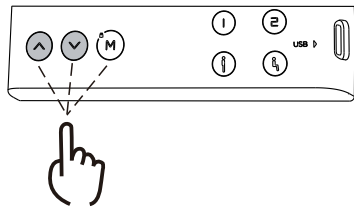

- a. Press "▲" or "▼" button and adjust the table to the desired height. Press "M" to save the height, and the screen will display "5-";

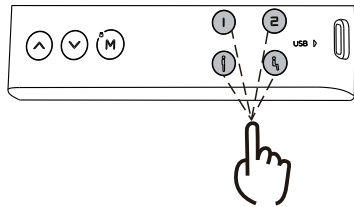

- b. Press "1", "2" or "↑", "↓" to save the height to the corresponding position 1 2 3 or 4, this time the display screen will show as "5-1", "5-2", or "5-3", or "5-4";

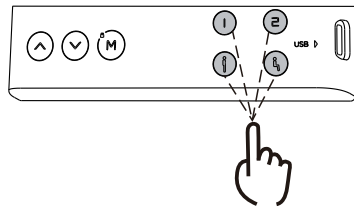


- c. Press "1", "2" and "↑", "↓" button to automatically adjust the height you saved.

USB charging function :

- a. USB output: QC2.0/QC3.0, 5.0v / 9.0v / 12.0v, ±5% Current: 1.0a.

Adjusting Collision Sensitivity

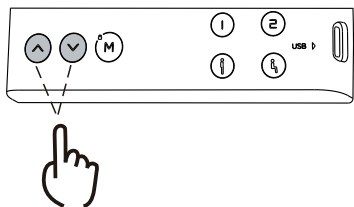

- a. By simultaneously holding down the "▲" and "▼" keys for 5 seconds, you can switch the sensitivity. One operation will switch to the next level, divided into 4 levels (R-0, R-1, R-2, R-3).

The display screen shows "R-0", indicating that the collision prevention function is turned off.

The display screen shows "R-1", indicating low sensitivity.


The display screen shows "R-2", indicating medium sensitivity.

The display screen shows "R-3", indicating high sensitivity.

- b. When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.

- c. If the display screen does not show any of the above codes when simultaneously holding down the "▲" and "▼" keys for 5 seconds, it means that there is no collision prevention function.

Error Code Processing

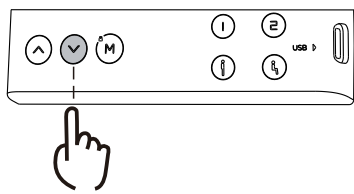

- a. If display screen shows "R5f" or "r5L", press button "▼" to the lowest position, keep press "▼" until desk bounce and screen shows current height, reset is completed.
- b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.
- c. If there are other error codes and pressing the "▼" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "R5f" or "r5L". Press and hold the "▼" downward key to reset.
- d. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

Troubleshooting

This list is used for checking and solving faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	Check if the load weighs more than 300 kg
The worksurface slides downward	
The device often enters the reset state	Perform a reset operation
Only descending, not ascending, or only ascending, not descending	
Insufficient height for ascending and descending	
The bottom cannot rise	Power off for 18 minutes and then reconnect the power
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table



Attention

1. Power supply: AC100V-240V, frequency 50/60Hz.
2. Operating environment: Indoor, 0-40° .
3. Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
4. The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
5. Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
6. Before first use, familiarize yourself with all the functions and program settings of the product.
7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Use under proper supervision and guidance for children aged eight or over and those with physical and sensory impairments or mental disabilities. Children should not be exposed to play.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. If necessary, keep the original packaging for future transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.