

LED Monitor User Manual

Read this manual carefully before use, and retain for future reference.
Statement: This document is a reference manual, Please refer to the actual product.

WARNING

Do not open the back cover to avoid electric shock. No additional spare parts are inside the case. Any questions contact our service personnel.



A triangle with a lightning arrow in: Remind you of probable high voltage here in case of electric shock.



A triangle with an exclamation mark in: Remind you that the parts here are very important replacement etc is needed, please refer to relevant technical specifications.

Warning: Do not put the monitor in rainy or foggy places to prevent from fire or electric shock. Do not apply hard objects to abrade or knock on the liquid crystal screen since these may cause scratches or damages.

Warning: Modifying the product without any authorization is forbidden.

NOTE:

Excessive sound pressure from earphones and headphones can cause hearing loss.

SAFETY

Please immediately pull out the AC power plug from adapter if there is an abnormal sound or smell or the monitor has no picture, and contact after sales support.

The monitor should be kept free from rain, damp and dust to prevent electrical shock and short circuits. Do not cover the ventilation openings with table clothes, curtains, newspapers etc.

The monitor should be kept from high temperature heating objects or direct sunlight. It requires good ventilation. Allow 10 cm between the TV and other appliances or built-in cabinet walls.

You may clean the display panel with a soft clean cloth after pulling out the power plug. DO NOT repeatedly wipe the panel, nor scrape, tap or strike the panel with a hard object.

Do not wipe the TV with any petrol, chemical or alcohol based solvents as it will lead to product damage of the panel and cabinet.

Do not place the monitor on an unstable surface.

Do not place the power cord or other cables across a walkway in case it is trampled on. Do not overload the power cord or power socket.

Do not disassemble the back cover as it contains high voltages inside and will cause electric shock. Internal adjustments and checks should only be conducted by qualified professionals.

Do not place naked flame sources, such as lit candles on or near the monitor. Please pull out the power plug and contact after sales support if there are abnormal objects or water in the monitor.

FUNCTIONS

Statement: This document is a reference manual, Please refer to the actual product.



HDMI



VGA



EARPHONE



DC 12V

HDMI : HDMI input.

VGA : VGA input

EARPHONE : EARPHONE output

DC 12V : DC 12V power input

CONTROL MONITOR

MENU : MENU KEY.



: LEFT KEY / Contrast hot key.



: RIGHT KEY / brightness hot key.

AUTO : AUTO/EXIT KEY.



: Power standby KEY.

Function Key Guide may vary depending on the function or product model. Please refer to the actual product.

TROUBLESHOOTING

Power cannot be turned on	Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears	-Check that the signal line is connected properly -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
Image colour or quality deteriorates	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc.
Display warning message	-Check that the input signal line is properly fixed. -Select the correct input signal.