



Installation instructions

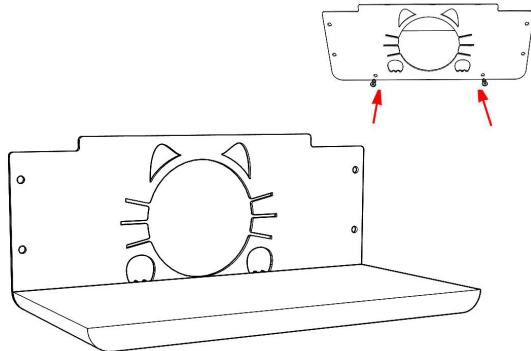


Step 1:

Take out the plank 1 and corrugated paper 1, according to the above diagram, use two plastic screws to connect and fix the plank 1 and corrugated paper 1.

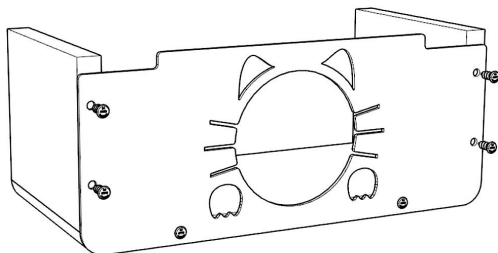

Step 2:


Take out the corrugated 2, as shown in the above picture placed on the corrugated 1, using four plastic screws will be corrugated 2 and plank 1 connection fixed.

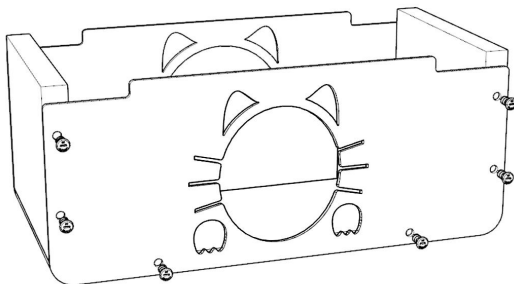

Step 3:

Take out the plank 1, according to the above diagram display, use six plastic screws, the plank 1 and corrugated paper 1 and 2 connection fixed.


- | | | |
|---|--|----------------------------|
| 1 | | Plank 1 * 2 PCS |
| 2 | | Plank 2 * 1 PCS |
| 3 | | Plank 3 * 1 PCS |
| 4 | | Corrugated Paper 1 * 1 PCS |
| 5 | | Corrugated Paper 2 * 2 PCS |
| 6 | | Corrugated Paper 3 * 1 PCS |
| 7 | | Plastic screws * 20 PCS |

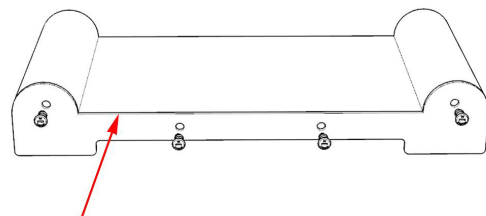

The corrugated paper is aligned along the top edge of the plank.


Step 4:

Take out the board 2 and corrugated paper 3, as shown above, use four plastic screws to connect and fix the Board 2 and corrugated paper 3.

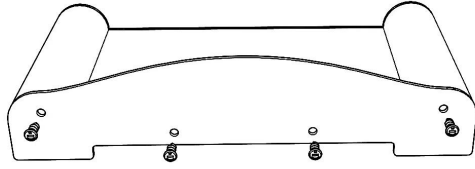

Step 5 :

Take out the board 3, as shown above, using four plastic screws, the board 3 and corrugated paper 3 connection fixed.

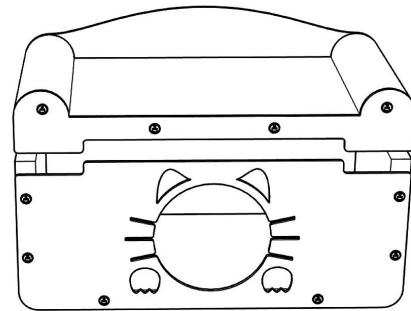

Step 6 :

After completing steps 3 and 5, place the installed parts above the plank 1 as shown above, and finish the installation.